

**Caution**

tbone aviation specifically warn that the ear impression is made by a licensed audiologist at a reputed hearing clinic only. This instruction is for licensed and trained personnel only.

**Purpose**

The purpose of this instruction is to describe what tbone aviation requires of an ear impression to provide the best possible basis for manufacturing of the tbone aviation™ headset and hence this is not a complete instruction in making impressions.

This document has been generated by the tbone aviation order system and printed by the client.

**Precautions**

Prior to making an ear impression, please make sure that the client is examined according to good practices of licensed audiologists.

**Materials**

tbone aviation requires that the impression materials are of the silicone type. We do not require any specific type, brand or make although silicone with a medium viscosity is preferable.

On the client form, please indicate the brand and type of the impression material used.

**Method**

tbone aviation does not require a special impression method to be used in the process. It is recommended that you use the method that you'd normally use for making impressions for ITE hearing aids or customized hearing protections.

Please indicate on the client form if you have instructed the client to have his mouth open or shut during the injection and curing phase.

**Quality assurance**

When determining whether the impressions are of the required quality, we kindly ask you to follow the QA section on the client form and check mark the appropriate boxes.

tbone aviation may reject impressions that do not meet the requirements set in this document. In such case tbone aviation will notify the hearing clinic to solve the cause with reject reason.

**Payment**

*The payment for your service is to be settled between the hearing clinic and your client alone.* tbone aviation will **not** accept an invoice for your service.

**Shipping**

To avoid damage to the impressions, we recommend that the hearing clinic pack and ship the impressions on behalf of the client.

The impressions should be placed in a rigid container and shipped in a protective envelope together with this document.

*Payment for packing and shipping is a matter between the hearing clinic and your client alone.* tbone aviation will **not** accept any charge for this service.

The shipping address is:

tbone aviation a/s  
Yderlandsvej 23  
2300 Copenhagen S  
Denmark  
Phone: +45 72 100 193

**Point of Contact**


If you have any questions to the requirements described above, please do not hesitate to contact tbone aviation by e-mail: [sales@tboneaviation.com](mailto:sales@tboneaviation.com)

**Impression coverage**

tbone aviation requires the impression to cover certain areas of the ear. Please pay attention to these areas, as the functionality of the product depends heavily on this.

The following are very important:

- Depth of impression: Must extend beyond the second bend.
- Coverage on the outside: 1) Cymba Conchae, 2) Cavum Conchae and 3) Radix Helix.

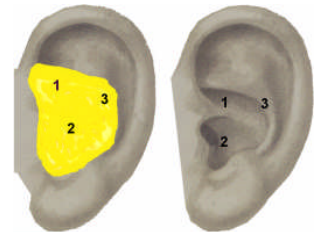

**Client Form**

<p>Client name: _____  tbone order number: _____  Impression taker: (Company Stamp &amp; Signature): _____</p> <p>Date of Impression: _____</p> <p>Signature audiologist: _____</p>	<p><b>Quality Insurance</b></p> <p>Material used: Brand _____  Type _____</p> <p><b>Coverage:</b></p> <table style="width: 100%; border: none;"> <tr> <td style="width: 70%;"></td> <td style="text-align: center;">Right</td> <td style="text-align: center;">Left</td> </tr> <tr> <td>Extends beyond second bend</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>Covers Cymba Conchae</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> <tr> <td>Covers Cavum Conchae</td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> </table> <p><input type="checkbox"/> Impression is smooth, complete and free of voids</p>		Right	Left	Extends beyond second bend	<input type="checkbox"/>	<input type="checkbox"/>	Covers Cymba Conchae	<input type="checkbox"/>	<input type="checkbox"/>	Covers Cavum Conchae	<input type="checkbox"/>	<input type="checkbox"/>
	Right	Left											
Extends beyond second bend	<input type="checkbox"/>	<input type="checkbox"/>											
Covers Cymba Conchae	<input type="checkbox"/>	<input type="checkbox"/>											
Covers Cavum Conchae	<input type="checkbox"/>	<input type="checkbox"/>											
<p><b>Comments:</b></p> <div style="border: 1px solid black; height: 40px; width: 100%;"></div>													